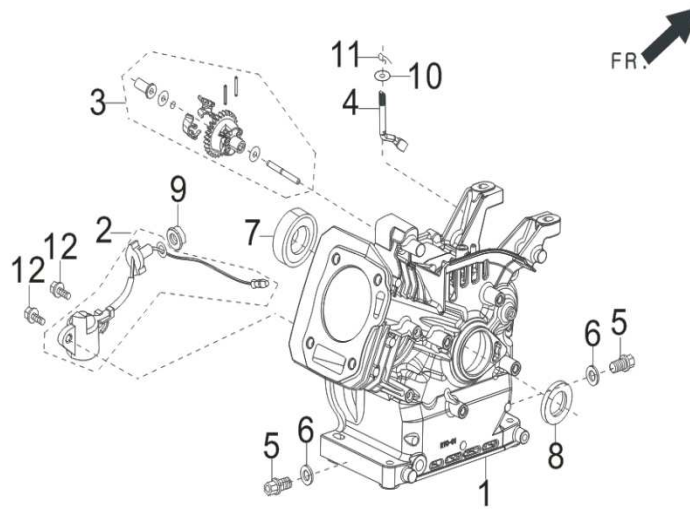


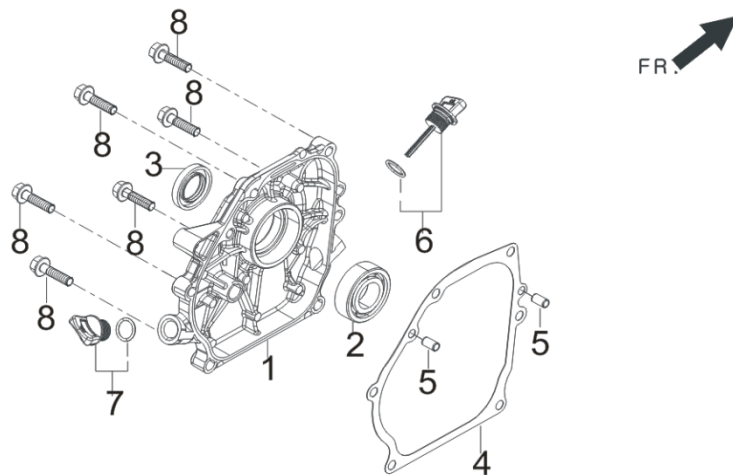
H212

FIG.1 CRANKCASE. / GEAR ASSY, GOVERNOR.(E01)

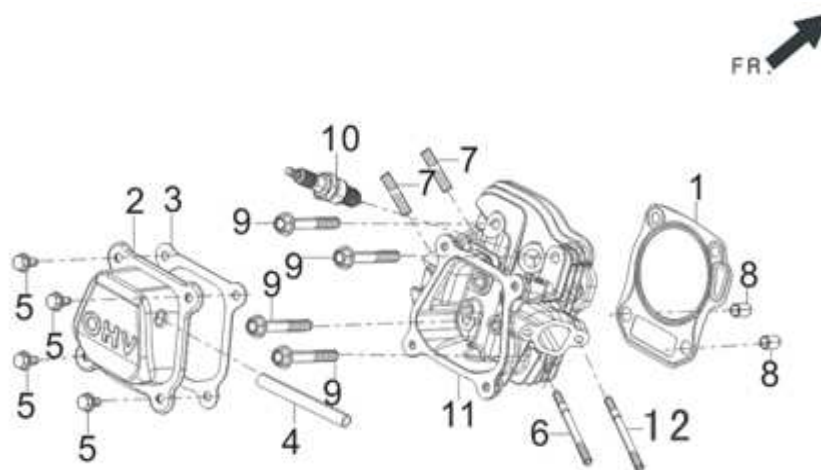


REF.NO.	PART NO	DESCRIPTION	Q'TY
E01-1	11310-Z140420-0000	CRANKCASE SUBASSEMBLY.	1
E01-2	37060-Z010120-0000	SENSOR, ENGINE OIL	1
E01-3	16400-Z010110-00A0	GEAR ASSY, GOVERNOR	1
E01-4	16061-Z010110-00A0	ARM, GOVERNOR	1
E01-5	11007-Z010110-00A0	BOLT, DRAIN PLUG	2
E01-6	90408-Z010110-00A0	FLAT WASHER	2
E01-7	90548-0205-CLA0	DEEP GROOVE BALL BEARING	1
E01-8	90682-Z300110-00A0	SEAL, OIL	1
E01-9	90305-Z010210-01A0	HEXAGON NUT WITH FLANGE	1
E01-10	90408-Z010210-00A0	FLAT WASHER	1
E01-11	90501-Z010110-00A0	COTTER PIN	1
E01-12	90001-0614-01A0	BOLT	2

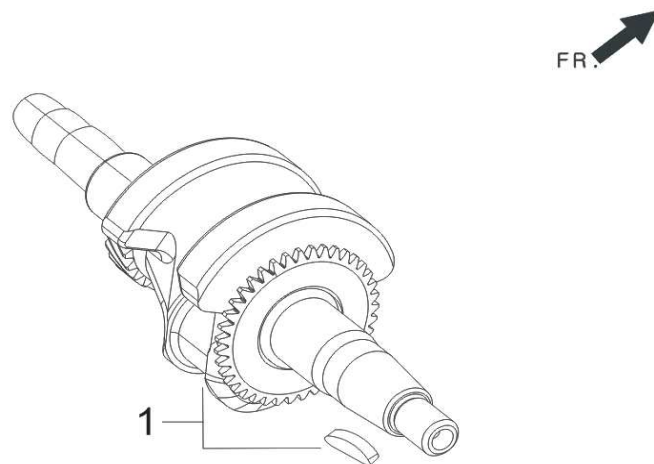
FIG.2 COVER SUBASSEMBLY, CRANKCASE (E02)



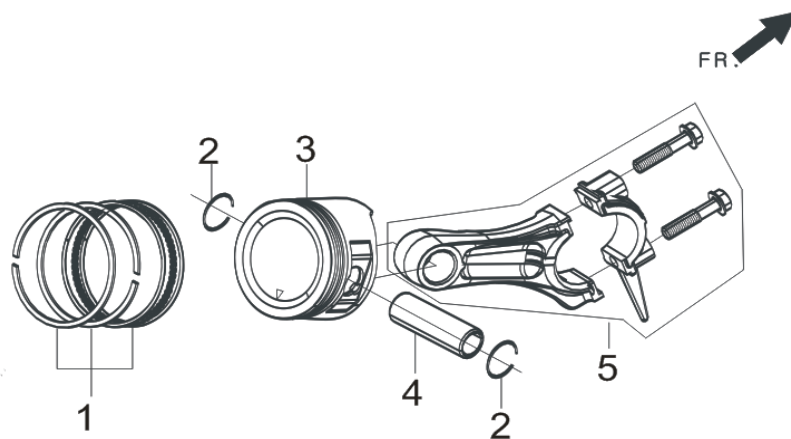
REF.NO.	PART NO	DESCRIPTION	Q'TY
E02-1	11411-Z010710-00A0	COVER, CRANKCASE	1
E02-2	90548-0205-CLA0	DEEP GROOVE BALL BEARING	1
E02-3	90682-Z300110-00A0	SEAL, OIL	1
E02-4	11001-Z010120-00A0	GASKET, CRANKCASE	1
E02-5	90502-0812-00A0	POSITION PIN	2
E02-6	15010-Z010130-Q5A0	DIPSTICK SUBASSEMBLY, OIL	1
E02-7	15030-Z010130-Q5A0	PLUG SUBASSEMBLY, ENGINE OIL	1
E02-8	90001-0832-01A0	BOLT	6

FIG.3 HEAD SUBASSEMBLY, CYLINDER / PLUG,SPARK(E03)

REF.NO.	PART NO	DESCRIPTION	Q'TY
E03-1	12131-Z140120-00A0	GASKET, CYLINDER HEAD	1
E03-2	12410-Z300120-00A0	COVER SUBASSEMBLY, CYLINDER HEAD	1
E03-3	12004-Z010110-0001	CYLINDER HEAD COVER GASKET	1
E03-4	17004-Z050210-00A0	TUBE, BREATHER	1
E03-5	90001-0612-01A0	BOLT	4
E03-6	90204-Z620110-00A0	STUD BOLT	1
E03-7	90203-Z010110-0000	STUD BOLT	2
E03-8	90502-1014-00A0	POSITION PIN	2
E03-9	12003-Z010110-00A0	CYLINDER HEAD BOLT	4
E03-10	30010-Z010210-00A0	PLUG, SPARK	1
E03-11	12140-Z040610-00A0	HEAD SUBASSEMBLY, CYLINDER	1
E03-12	90207-Z330310-0000	STUD BOLT	1

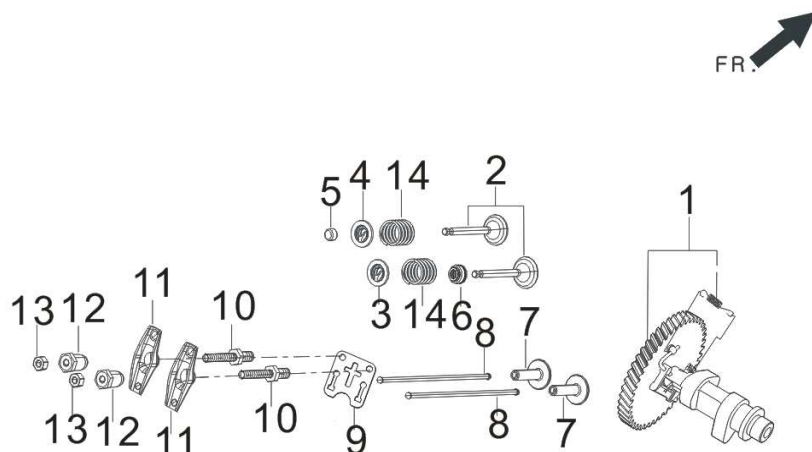
FIG.4 ROD,CRANKSHAFT CONNETING(E04)

REF.NO.	PART NO	DESCRIPTION	Q'TY
E04-1	13300-Z143810-00A0	CRANKSHAFT ASSY.	1

FIG.5 RING SET,OIL / ROD,CRANKSHAFT CONNETING (E05)

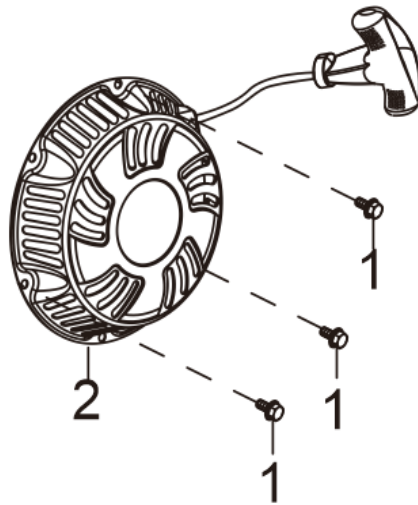
REF.NO.	PART NO	DESCRIPTION	Q'TY
E05-1	13200-Z140210-00A9	RING ASSY, PISTON	1
E05-2	13122-Z010110-00A0	CLIP, PISTON PIN	2
E05-3	13111-Z140220-00A9	PISTON	1
E05-4	13121-Z010110-00A0	PIN, PISTON	1
E05-5	13010-Z440210-00A9	ROD, CONNECTING	1

FIG.6 TRAIN,VALVE / CAMSHAFT SUBASSEMBLY (E06)



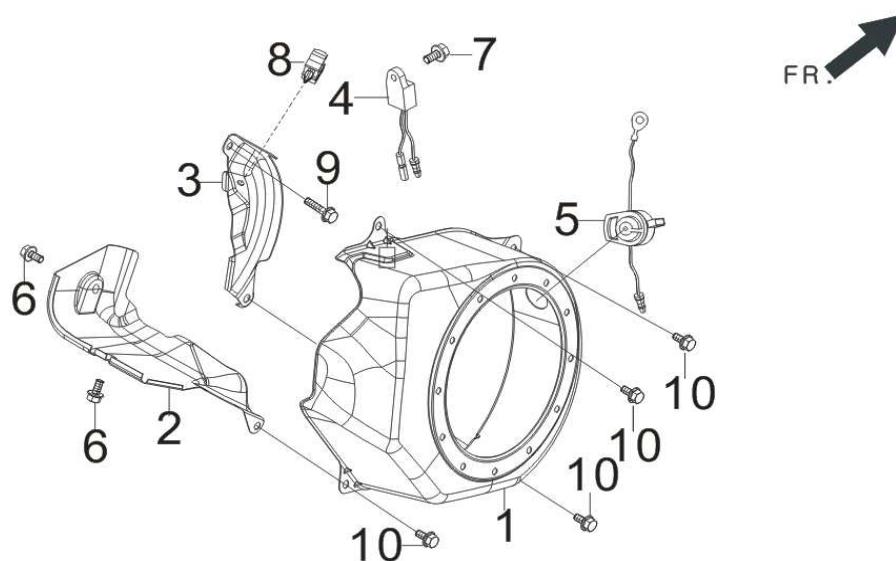
REF.NO.	PART NO	DESCRIPTION	Q'TY
E06-1	14200-Z300210-00A0	CAMSHAFT ASSY.	1
E06-2	12110-Z010110-00A0	VALVES SET	1
E06-3	12112-Z010110-00A0	SEAT, VALVE SPRING	1
E06-4	12107-Z010110-00A0	RETAINER, EXHAUST VALVE	1
E06-5	12104-Z010110-00A0	ROTATOR, VALVE	1
E06-6	12101-Z010110-00A0	GUIDE, SEAL	1
E06-7	14081-Z040110-00A0	TAPPET, VALVE	2
E06-8	14071-Z440110-00A0	LIFTER, VALVE	2
E06-9	14090-Z010110-00A0	PLATE SUBASSEMBLY, LIFTER STOPPER	1
E06-10	14313-Z010110-00A0	ROCKSHAFT BOLT	2
E06-11	14311-Z010110-00A0	ROCKER, VALVE	2
E06-12	14314-Z010110-00A0	NUT, VALVE ADJUSTING	2
E06-13	14312-Z010110-00A0	NUT, VALVE LOCK	2
E06-14	12103-Z010110-00A0	SPRING, VALVE	2

FIG.7 STARTER,RECOIL (E07)

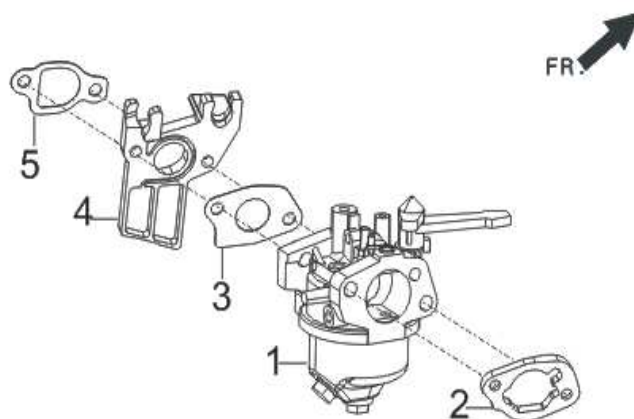


REF.NO.	PART NO	DESCRIPTION	Q'TY
E07-1	90251-0608-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	4
E07-2	28200-Z440110-H700	STARTER ASSY, RECOIL	1

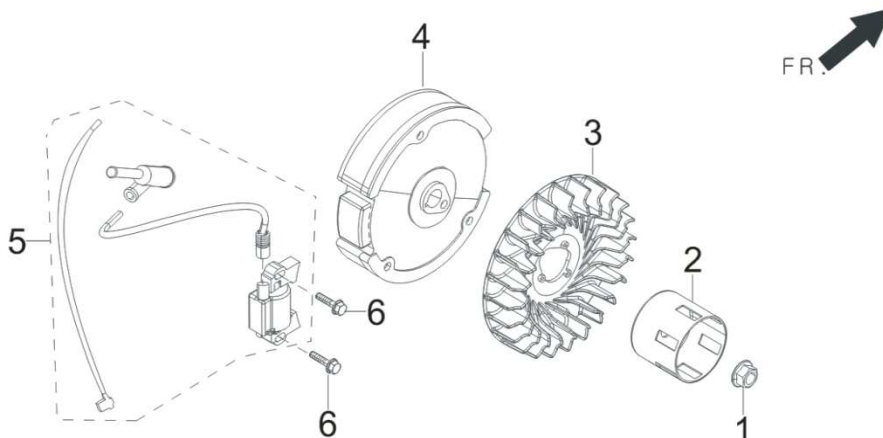
FIG.8 SHROUD / SHIELD,LOWER (E08)



REF.NO.	PART NO	DESCRIPTION	Q'TY
E08-1	28110-Z300410-BTA0	SHROUD	1
E08-2	19304-Z010711-00A0	SHROUD, CYLINDER BODY	1
E08-3	19340-Z010810-00A0	SHIELD,LOWER	1
E08-4	37050-Z010210-0000	PROTECTOR, OIL	1
E08-5	35540-Z060140-Q2A0	SWITCH SUBASSEMBLY, STOP ENGINE	1
E08-6	90001-0610-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2
E08-7	90001-0610-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	1
E08-8	90740-Z010110-00A0	COLLAR	1
E08-9	90001-0620-01A0	BOLT	1
E08-10	90001-0612-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	4

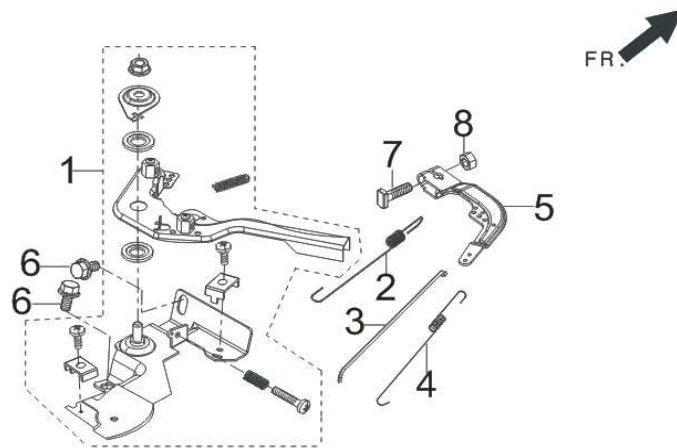
FIG.9 CARBURETOR ASSY. (E09)

REF.NO.	PART NO	DESCRIPTION	Q'TY
E09-1	16100-Z040210-00A0	CARBURETOR ASSY.	1
E09-2	17001-Z010210-00A0	AIR CLEANER SEAL GASKET	1
E09-3	16001-Z010110-00A0	CARBURETOR SEAL GASKET	1
E09-4	16003-Z010110-0001	PLATE, CARBURETOR INSULATOR	1
E09-5	16002-Z010110-00A0	GASKET, CARBURETOR INSULATOR	1

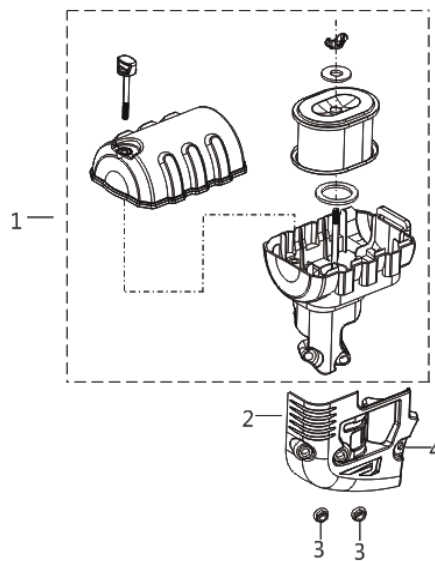
FIG.10 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E10)

REF.NO.	PART NO	DESCRIPTION	Q'TY
E10-1	13501-Z010110-00A0	NUT, FLYWHEEL	1
E10-2	28002-Z010310-00A0	PULLEY, STARTER	1
E10-3	19352-Z010110-00A0	IMPELLER	1
E10-4	13510-Z300110-0000	FLYWHEEL SUBASSEMBLY	1
E10-5	30400-Z540210-0000	COIL, IGNITION	1
E10-6	90001-0625-01A0	HEXAGON SOCKET FLANGE FACE BOLT - SMALL SERIES	2

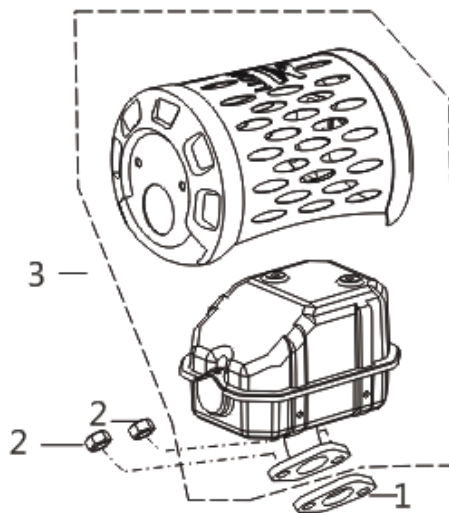
FIG.11 CONTROL ASSY, THROTTLE (E11)



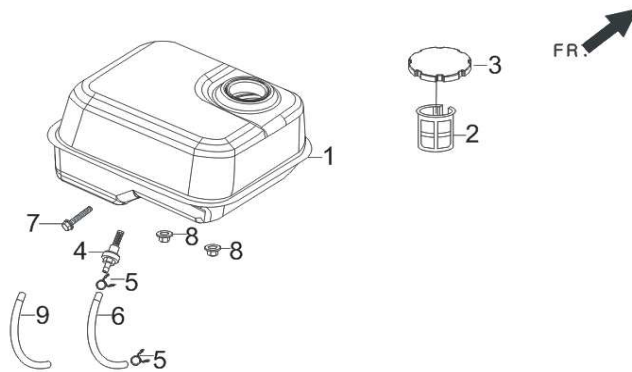
REF.NO.	PART NO	DESCRIPTION	Q'TY
E11-1	16520-Z010230-00A0	CONTROL ASSY, THROTTLE	1
E11-2	16063-Z010110-00A0	SPRING, GOVERNOR	1
E11-3	16062-Z010110-00A0	ROD, GOVERNEOR	1
E11-4	16012-Z010110-00A0	SPRING, THROTTLE VALVE RETURNING	1
E11-5	16070-Z010110-00A0	GOVERNOR BRACKET SUBASSEMBLY	1
E11-6	90001-0610-01A0	BOLT	2
E11-7	16072-Z010110-00A0	BOLT, GOVERNOR SUPPORT	1
E11-8	90305-0600-31A0	HEXAGON NUT WITH FLANGE	1

FIG.12 CLEANER, AIR (F01)

REF.NO.	PART NO	DESCRIPTION	Q'TY
F01-1	17100-Z290110-0000	AIR CLEANER	1
F01-2	17123-Z290110-0000	SHIELD, AIR CLEANER	1
F01-3	90305-0600-31A0	HEXAGON NUT WITH FLANGE	2
F01-4	90007-0614-A1A0	BOLT	1

FIG.13 MUFFLER ASSY. (F02)

REF.NO.	PART NO	DESCRIPTION	Q'TY
F02-1	18001-Z010110-00A0	GASKET, EXHAUST OUTLET	1
F02-2	90303-0800-31A0	TYPE 1 HEXAGON NUT	2
F02-3	18100-Z290210-0000	MUFFLER ASSY.	1

FIG.14 TANK ASSY, FUEL (F03)

REF.NO.	PART NO	DESCRIPTION	Q'TY
F03-1	16620-Z290211-WJ0P	FUEL TANK	1
F03-2	16652-Z010610-00A0	STRAINER, FUEL	1
F03-3	16730-Z440410-0000	COVER, FUEL TANK	1
F03-4	16680-Z010110-00A0	OUTLET SUBASSEMBLY, FUEL TANK OIL	1
F03-5	90740-Z010210-00A0	COLLAR	2
F03-6	90686-Z010510-00A0	TUBE, FUEL	1
F03-7	90001-0632-01A0	BOLT	1
F03-8	90305-0600-31A0	HEXAGON NUT WITH FLANGE	2
F03-9	30431-Z010110-0000	JACKET, RUBBER	1