



H212G

FIG. 1 CRANKCASE. / GEAR ASSY, GOVERNOR

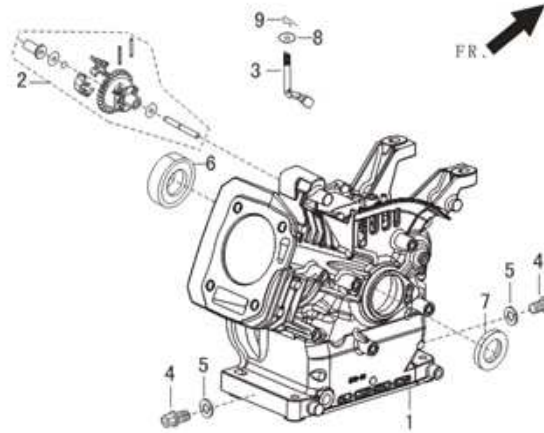


REF. NO.	PART NO	DESCRIPTION	Q' TY
E01-1	11310-Z140520-00A0	Crankcase Subassembly.	1
E01-2	16400-Z010110-00A0	Gear Assy, Governor	1
E01-3	16061-Z010110-00A0	Arm, Governor	1
E01-4	11007-Z010110-00A0	Bolt, Drain Plug	2
E01-5	90408-Z010110-00A0	Flat Washer	2
E01-6	90547-0205-00A0	Deep Groove Ball Bearing	1
E01-7	90682-Z300110-00A0	Seal, Oil	1
E01-8	90408-Z010210-00A0	Flat Washer	1
E01-9	90501-Z010110-00A0	Cotter Pin	1

FIG. 2 COVER SUBASSEMBLY, CRANKCASE (E02)

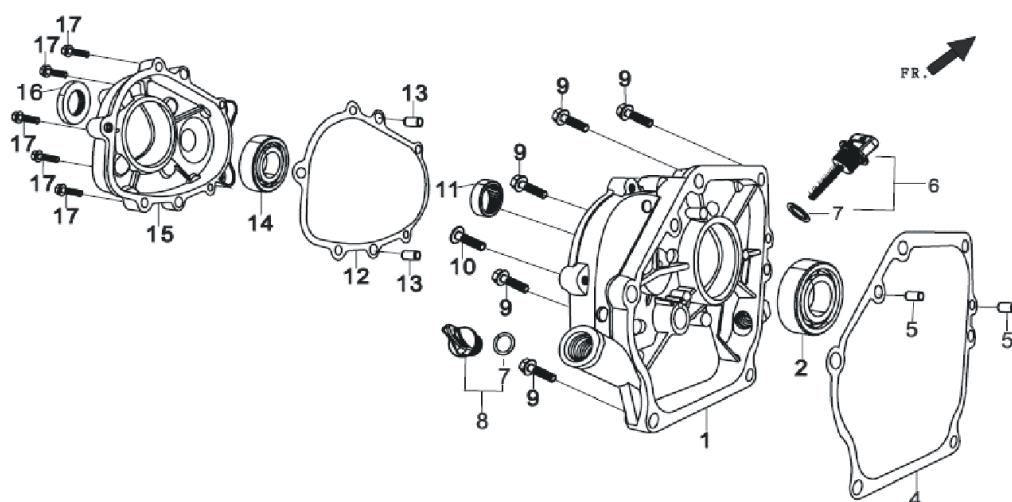


REF. NO.	PART NO	DESCRIPTION	Q' TY
E02-1	11411-Z600610-0000	Cover, Crankcase	1
E02-2	90547-0205-00A0	Deep Groove Ball Bearing	1
E02-4	11001-Z010120-00A0	Gasket, Crankcase	1
E02-5	90502-0812-00A0	Position Pin - Type A	2
E02-6	15010-Z010130-LL00	Dipstick Subassembly, Oil	1
E02-8	15030-Z010130-LL00	Plug Subassembly, Engine Oil	1
E02-9	90001-0832-01A0	Bolt	5
E02-10	90105-Z2K0110-0000	Bolt	1
E02-12	11004-Z600120-00A0	Gasket, Left Crankcase Cover	1
E02-13	90502-0812-00A0	Position Pin - Type A	2
E02-14	90547-0205-CLAT	Deep Groove Ball Bearing	1
E02-15	11511-Z600210-00A0	Cover, Left Crankcase	1
E02-16	90682-Z300110-00A0	Seal, Oil	1
E02-17	90001-0628-01A0	Bolt	5

FIG. 3 HEAD SUBASSEMBLY, CYLINDER / PLUG, SPARK (E03)

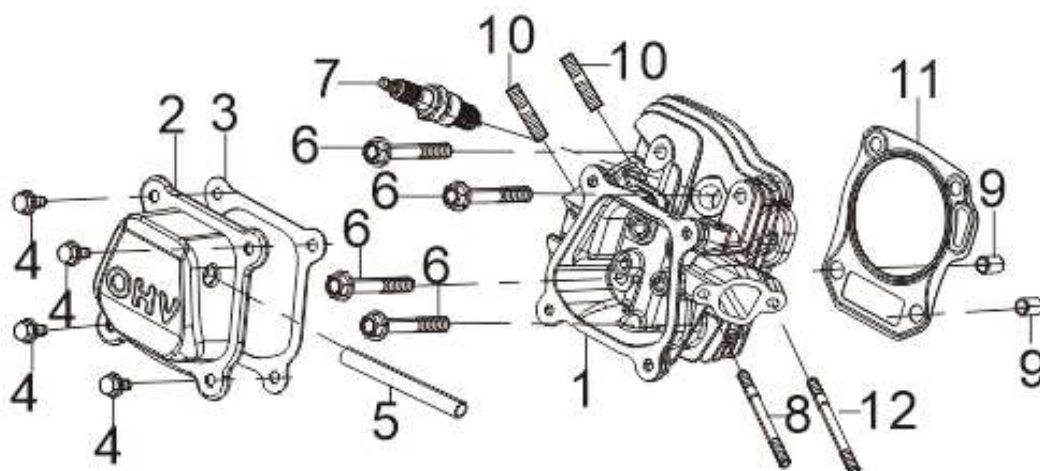


REF. NO.	PART NO	DESCRIPTION	Q' TY
E03-1	12140-Z040610-00A0	Head Subassembly, Cylinder	1
E03-2	12410-Z300120-00A0	Cover Subassembly, Cylinder Head	1
E03-3	12004-Z010110-0001	Cylinder Head Cover Gasket	1
E03-4	90001-0612-01A0	Hexagon Socket Flange Face Bolt - Small Series	4
E03-5	17004-Z050210-00A0	Tube, Breather	1
E03-6	12003-Z010110-00A0	Cylinder Head Bolt	4
E03-7	30010-Z010210-00A0	Plug, Spark	1
E03-8	90207-Z330310-0000	Stud Bolt	1
E03-9	90502-1014-00A0	Position Pin - Type A	2
E03-10	90203-Z010110-0000	Stud Bolt (Bm=1.5D)	2
E03-11	12131-Z140120-00A0	Gasket, Cylinder Head	1
E03-12	90204-Z620110-00A0	Stud Bolt (Bm=2D)	1

FIG. 4 ROD, CRANKSHAFT CONNETING (E04)

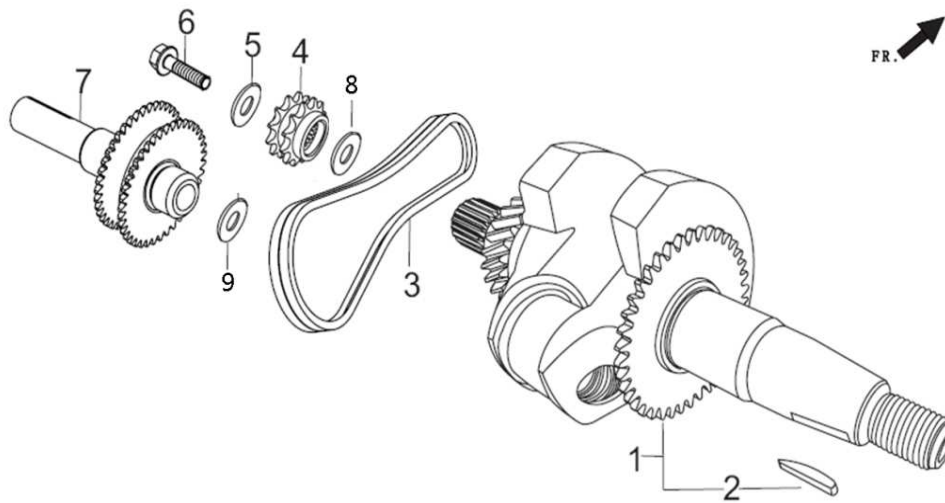


REF. NO.	PART NO	DESCRIPTION	Q' TY
E04-1	13300-Z141310-00A0	Crankshaft Assy.	1
E04-3	90710-Z600110-00A0	Chain	1
E04-4	42011-Z600120-00A0	Sprocket, Wheel	1
E04-5	90408-Y020210-00A0	Flat Washer	1
E04-6	90001-0820-01A0	Bolt	1
E04-7	13004-Z600120-00A0	Chain Wheel Output Shaft	1
E04-8	90408-Z600210-00A0	Flat Washer	1
E04-9	90408-Z600410-00A0	Flat Washer	1

FIG. 5 RING SET, OIL / ROD, CRANKSHAFT CONNETING (E05)

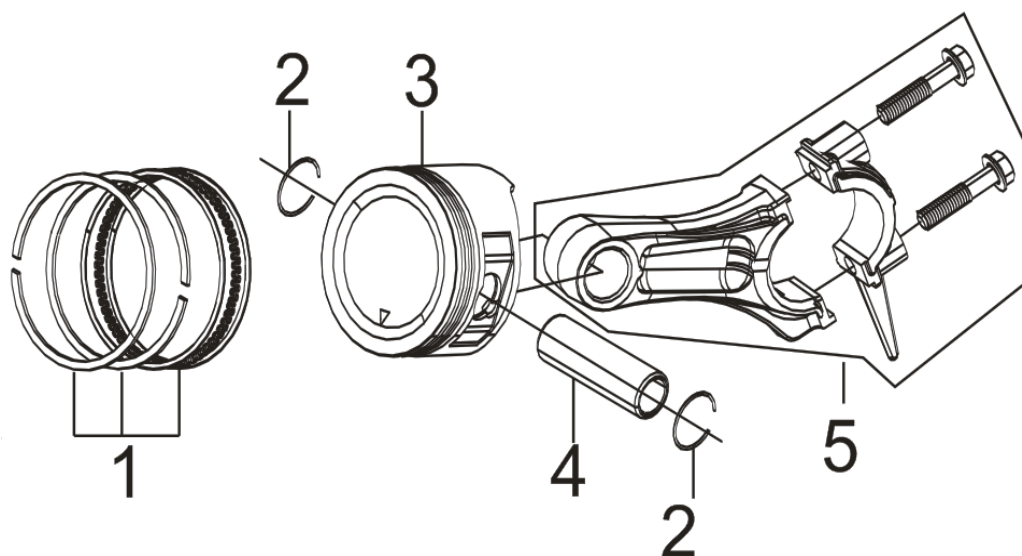


REF. NO.	PART NO	DESCRIPTION	Q' TY
E05-1	13200-Z140210-00A9	Ring Assy, Piston	1
E05-2	13122-Z010110-00A0	Clip, Piston Pin	2
E05-3	13111-Z140220-00A9	Piston	1
E05-4	13121-Z010110-00A0	Pin, Piston	1
E05-5	13010-Z440210-00A9	Rod, Connecting	1

FIG. 6 TRAIN, VALVE / CAMSHAFT SUBASSEMBLY (E06)

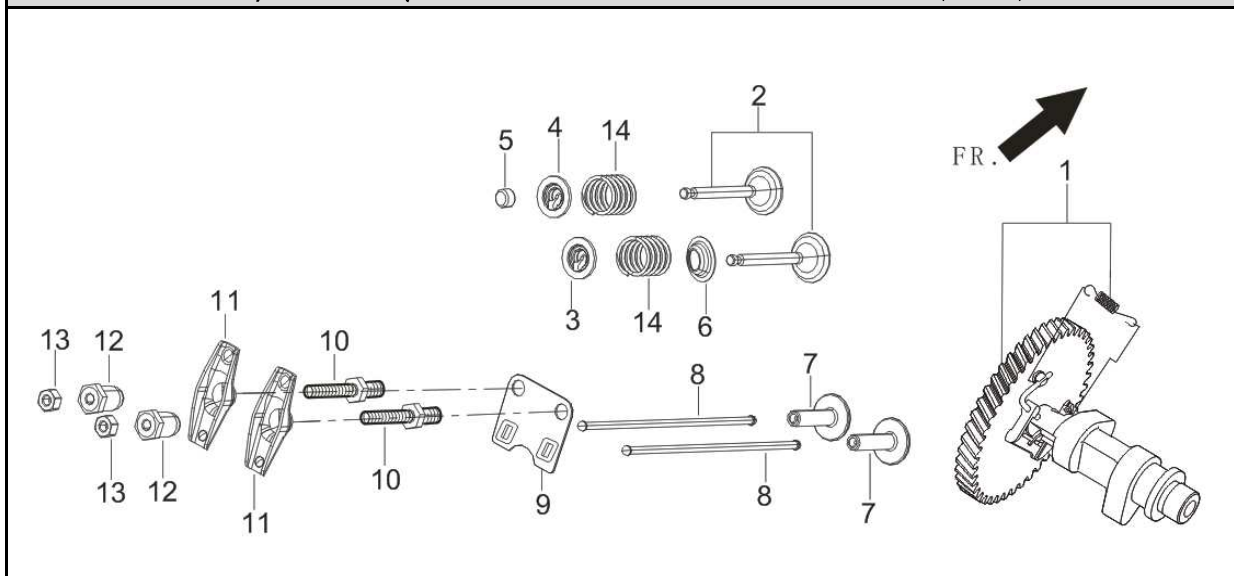


REF. NO.	PART NO	DESCRIPTION	Q' TY
E06-1	14200-Z040110-00A0	Camshaft Assy.	1
E06-2	12110-Z010110-00A0	Valves Set	1
E06-3	12112-Z010310-00A0	Seat, Valve Spring	1
E06-4	12107-Z010210-00A0	Retainer, Exhaust Valve	1
E06-5	12104-Z010110-00A0	ROTator, Valve	1
E06-6	12101-Z010110-00A0	Guide, Seal	1
E06-7	14081-Z040110-00A0	Tappet, Valve	2
E06-8	14071-Z440110-00A0	Lifter, Valve	2
E06-9	14090-Z010111-00A0	Plate Subassembly, Lifter Stopper	1
E06-10	14313-Z010110-00A0	Rockshaft Bolt	2
E06-11	14311-Z010110-00A0	Rocker, Valve	2
E06-12	14314-Z010110-00A0	Nut, Valve Adjusting	2
E06-13	14312-Z010110-00A0	Nut, Valve Lock	2
E06-14	12103-Z010110-00A0	Spring, Valve	2

FIG. 7 STARTER, RECOIL (E07)

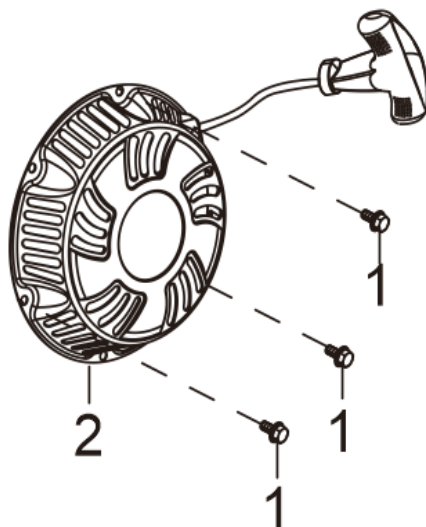


REF. NO.	PART NO	DESCRIPTION	Q' TY
E07-1	90001-0608-01A0	Bolt	3
E07-2	28200-Z440110-H7A0	Starter Assy, Recoil	1

FIG. 8 SHROUD / SHIELD, LOWER (E08)

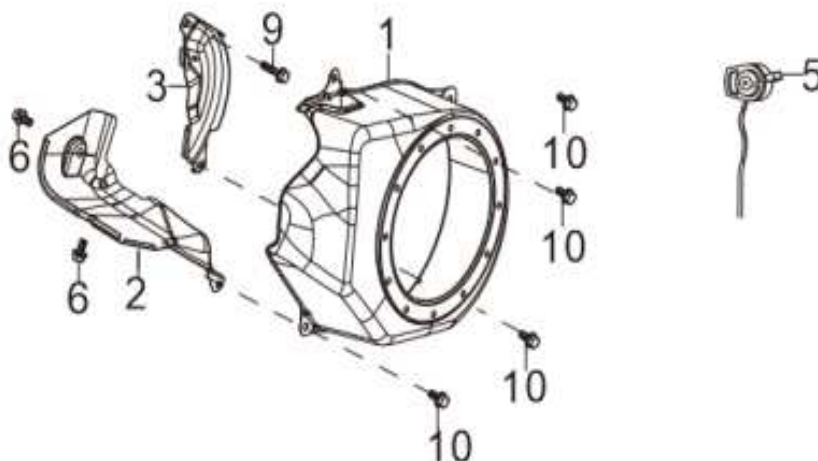


REF. NO.	PART NO	DESCRIPTION	Q' TY
E08-1	28110-Z300410-BTA0	Shroud	1
E08-2	19304-ZFS0110-0000	Shroud, Cylinder Body	1
E08-3	19340-Z010810-00A0	Shield, Lower	1
E08-5	35540-Z060230-Q2A0	Switch Subassembly, Stop Engine	1
E08-6	90001-0610-01A0	Hexagon Socket Flange Face Bolt - Small Series	2
E08-9	90001-0620-01A0	Hexagon Socket Flange Face Bolt - Small Series	1
E08-10	90001-0612-01A0	Hexagon Socket Flange Face Bolt - Small Series	4

FIG. 9 CARBURETOR ASSY. (E09)

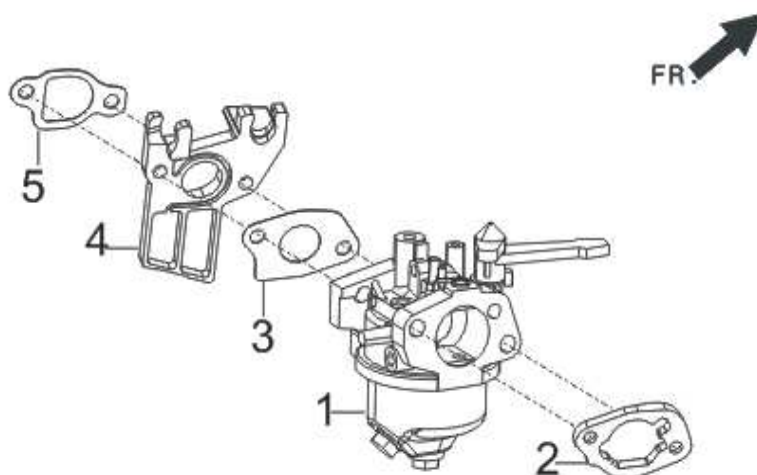


REF. NO.	PART NO	DESCRIPTION	Q' TY
E09-1	16100-Z040210-00A0	Carburetor Assy.	1
E09-2	17001-Z1D0110-00A0	Air Cleaner Seal Gasket	1
E09-3	16001-Z010110-00A0	Carburetor Seal Gasket	1
E09-4	16003-Z010110-0001	Plate, Carburetor Insulator	1
E09-5	16002-Z010110-00A0	Gasket, Carburetor Insulator	1

FIG. 10 FLYWHEEL / IMPELLER / STARTER PULLEY / IGNITION COIL (E10)

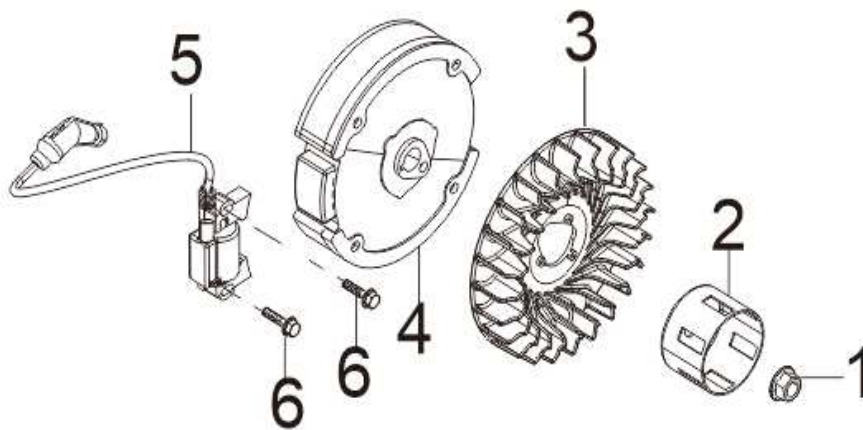


REF. NO.	PART NO	DESCRIPTION	Q' TY
E10-1	13501-Z010110-00A0	Nut, Flywheel	1
E10-2	28002-Z010310-0000	Pulley, Starter	1
E10-3	19352-Z010110-00A0	Impeller	1
E10-4	13510-Z300110-0000	Flywheel Subassembly	1
E10-5	30400-Z010210-0000	Coil, Ignition	1
E10-6	90001-0625-01A0	Bolt	2

FIG. 11 CONTROL ASSY, THROTTLE (E11)

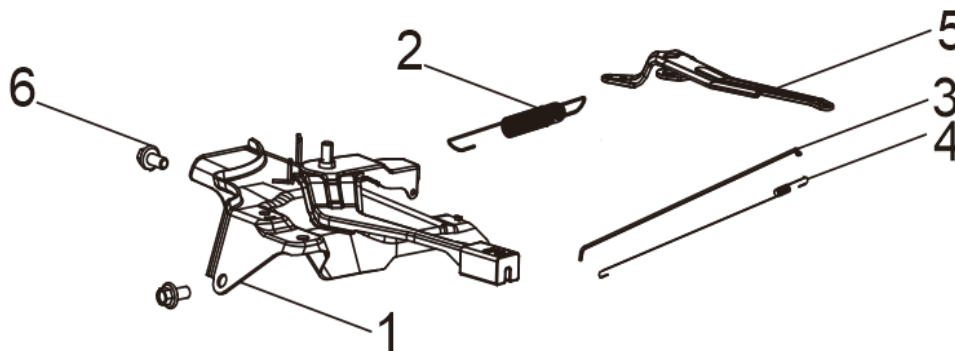


REF. NO.	PART NO	DESCRIPTION	Q' TY
E11-1	16520-Z010230-00A0	Control Assy, Throttle	1
E11-2	16063-Z010110-00A0	Spring, Governor	1
E11-3	16062-Z010110-0001	Rod, Governor	1
E11-4	16012-Z010110-00A0	Spring, Throttle Valve Returning	1
E11-5	1607A-Z012410-0000	Governing Bracket Subassembly Assembly	1
E11-6	90001-0610-01A0	Bolt	2

FIG. 12 CLEANER, AIR (F01)

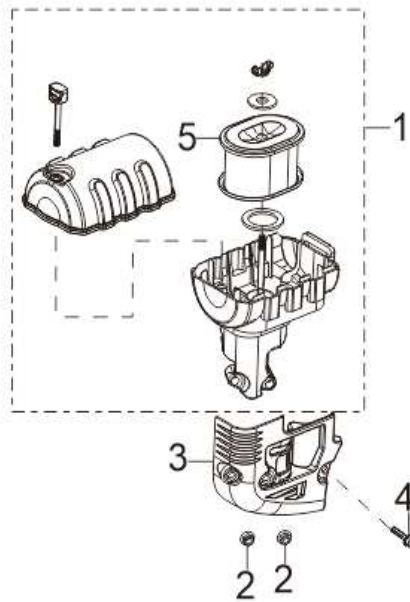


REF. NO.	PART NO	DESCRIPTION	Q' TY
F01-1	17100-Z290110-0000	Air Cleaner	1
F01-2	90305-0600-31A0	Hexagon Nut With Flange	2
F01-3	17123-Z290110-0000	Shield, Air Cleaner	1
F01-4	90001-0614-01A0	Hexagon Socket Flange Face Bolt - Small Series	1
F01-5	17150-Z010110-0000	Air Cleaner Element Assembly	1

FIG. 13 MUFFLER ASSY. (F02)

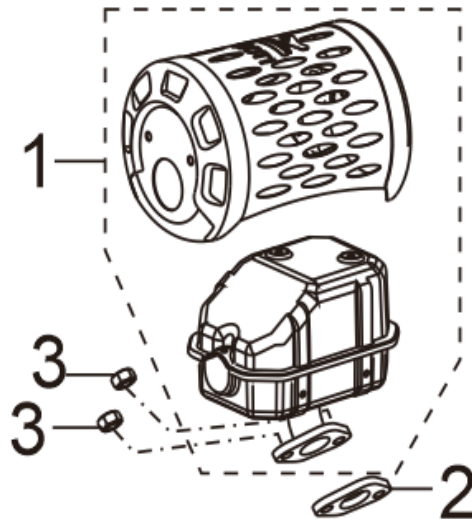

REF. NO.	PART NO	DESCRIPTION	Q' TY
F02-1	18100-Z290110-H7A0	Muffler Assy.	1
F02-2	18001-Z010110-00A0	Gasket, Exhaust Outlet	1
F02-3	90303-0800-31A0	Type 1 Hexagon Nut	2

FIG. 14 TANK ASSY, FUEL (F03)

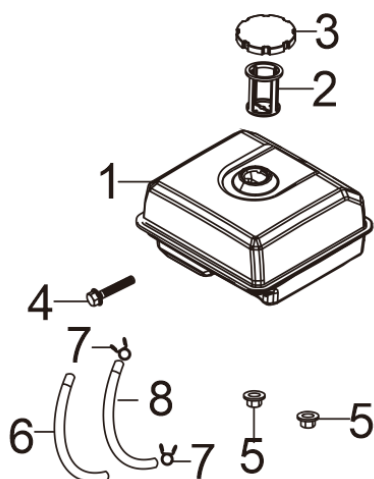

REF. NO.	PART NO	DESCRIPTION	Q' TY
F03-1	16620HZ290110-WJ00	Fuel Tank	1
F03-2	16652-Z010610-00A0	Strainer, Fuel	1
F03-3	16730-Z441110-00A0	Cover, Fuel Tank	1
F03-4	90001-0632-01A0	Hexagon Socket Flange Face Bolt - Small Series	1
F03-5	90305-0600-31A0	Hexagon Nut With Flange	2
F03-6	30431-Z010110-0000	Jacket, Rubber	1
F03-7	90740-Z010510-00A0	Collar	2
F03-8	90686-Z010510-00A0	Tube, Fuel	1